

**OUR PAPER FUNCTIONS IN MOST COLOR LASER COPIERS AND COLOR PRINTERS,  
WITH OR WITHOUT THE USE OF FUSER OIL**

**Printing:**

- Use the Multi-Function Tray (if applicable).
- The image side is placed face up in the tray. When the "Notched Corner" is on the upper-right hand side, the side for printing will be facing up.
- Fan sheets prior to loading.
- Use Mirror Image setting so image will read correctly after transferring to the chosen item.
- Use "Plain Paper" setting in Color Laser Copiers / Printers that have fusing temperatures over 170°C / 338°F.
- For other Color Laser copiers / printers use "Heavy Paper" setting.
- Set machine as you normally would for the type of original used (Le, PHOTO, TEXT, etc.).

**Pressing Paper Cubes:**

*Note:* A Cube press is required to perform the transfer accurately.

**Glue Side:**

- Cut and place the 1 Step® Cube paper on the cube's glue side.
- Press at 400° F for 30 seconds.
- Let cool for 15 seconds. Carefully remove transfer paper. Caution, HOT!!!

**Paper Side:**

- Cut and place the 1 Step® Cube paper on the cube's paper side. Only one side at a time.
- Press at 400° degrees for 60 seconds.
- Let cool for 15 seconds. Carefully remove transfer paper. Caution, HOT!!!
- Release pressure from cube holder, rotate cube for the next paper side.
- Repeat until all paper sides are printed.

**IMPORTANT:** Please keep your 1 Step® Cube paper in the plastic bag until actual use. This will prevent moisture from forming. Close the bag after each use.